

DC 169 description

1. Add the time


On the backside push the **MODE** button, till the emitter will be in man mode.



Push the **TIME** button for 5 second till the time will start flashing on the LCD.

Now on the front side set up the hour with the **UP** and **DOWN** buttons, then push the **TIME** button for once.

Now set up the minute, when You ready push the **TIME** button for 8 seconds, till the time stop flashing. Than push the **TIME** button one more to start the clock.

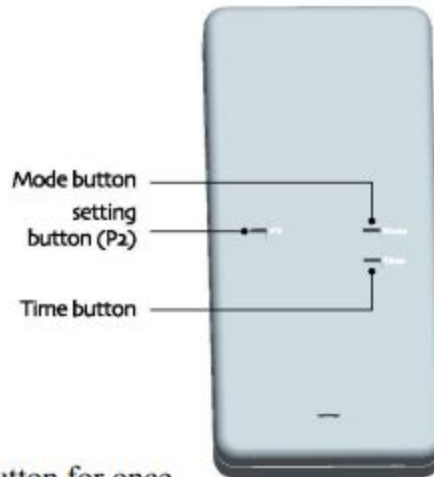

2. Working modes

You can choose 3 different type of mode with pushing the **MODE** button:

MAN: You can use the roller shutters only with manual (no timing).

AUTO: timing is working.

RANDOM: the roller shutters work randomly (holiday program).

