



GB **User's Manual**

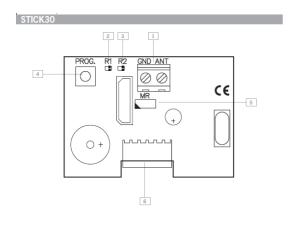

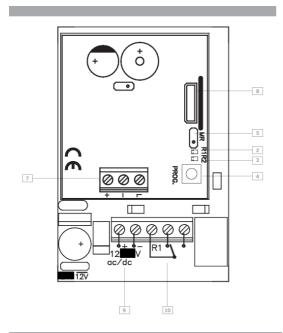

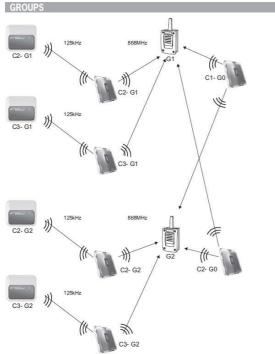

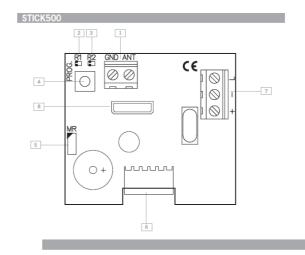

- Conexión antena Connexion antenne Antenna connection AnschluB Antenne 2 Led activación canal 1 Led d'activation canal 1 Channel 1 operation led Kanal 1 Aktivierungs-LED
- Led activación canal 2 Led d'activation canal 2 Channel 2 operation led Kanal 2 Aktivierungs-LED

- 6 Conexión cuadro Connexion armoire de comman Control panel connection AnschluBklemme Steuerung

30 Salida de relé 1

- Conexión tarjeta memoria
 Connexión carte de mémor
 Memory card connection
 Anschluß Speicherkarte

G=grupo
Nota: El grupo 0 activa todos los grupos C= canal

G= groupe
N. B. : le groupe 0 active tous les groupes

C=channel G=group

N.B. Group 0 enables all groups.

C=Kanal

G=Gruppe
Anmerkung: Die Gruppe O aktiviert alle Gruppen.

TECHNICAL CHARACTERISTICS

	STICK30	STICK500	DLX-500	
Frequency	868,35MHz	868,35MHz		
Coding		High security rolling code		
Memory	30 codes	500 codes	500 codes	
Number of channels	2 channels	2 channels	1 channel	
Supply	12Vdc ±10%	12Vdc ±10%	12V ac/dc ±10%	
Access control output		BUS-L	BUS-L	
Standby/Op. consumption	18mA / 40mA	30mA / 90mA	30mA / 90mA	
Op. temperature	-20°C to +85°C			
Size	52x37x17mm	52x46x24mm	120x70x52mm	

INSTALLATION AND CONNECTIONS (DLX-500)

Attach the rear part of the housing to the wall using the plugs and screws supplied. Pass the cables through the bottom of the equipment. Connect the power cables to the terminals marked in the mother board, as indicated. Fix the equipment front to the rear part using the screws supplied.

OPERATING

The pilot lights are activated every 5 seconds to indicate the correct supply of power to the equipment. Upon receiving a code, the receiver checks whether it is in its memory, activating the corresponding relay. The reley activation mode is selected in either impulse or ON/OFF using the programming tool (only with relay 1).

PROGRAMMING

Manual programming

Press the receiver programming button for 1 sec. and an acoustic signal will be heard. The receiver will enter programming (see table). If the receiver programming button is held pressed down, the receiver will pass cyclically from one configuration to the next. Once the programming configuration for the transmitter to be registered has been chosen, send the code to be programmed by pressing the transmitter. Every time a transmitter is programmed, the receiver will issue an acoustic signal for 0.5 sec. After 10 seconds without programming or pressing the first two transmitter buttons, the receiver will exit programming mode, issuing two acoustic signals of 1 sec. If upon programming a transmitter the receiver memory is full, it will issue 7 acoustic signals of 0.5 sec. and exit programming.

Configuration of transmitter programming in the receiver	Led R1	Led R2
Standard programming (default option, the receiver always is configured in multich	annel)	
The relays are activated 1st relay by channel 1 and 2nd relay by channel 2 (3rd relay by channel 1 and 4th relay by channel 2)	Flashing	Flashing
Special programming	•	-
Press the transmitter channel to activate the relay 1 on the receiver	ON	OFF
Press the transmitter channel to activate the relay 2 on the receiver	OFF	ON
Press the transmitter channel to activate the two relays at once *	ON	ON

^{*} If working in ON/OFF activation mode, relay 1 will act as impulse and relay 2 as ON/OFF. Therefore, on the first press relay 1 will close and open the contact and relay 2 will only close. On the second, relay 1 will close and open the contact and relay 2 will open.

MANUAL PROGRAMMING (DLX)

Press the DLX programming button for 1 sec. and an acoustic signal will be heard. The DLX will enter standard programming. Every time a proximity element is programmed, the DLX will issue an acoustic signal for 0.5 sec. After 10 seconds without programming, the DLX will exit programming mode, issuing two acoustic signals of 1 sec.

Total reset

In programming mode, the programming button is held down and the "MR" reset jumper is bridged for 3 secs. The receiver will issue 10 short acoustic warning signals followed by others at a faster pace to indicate that the operation has been successful. The receiver is now in programming mode.

After 10 seconds without programming or quickly pressing the programming button, the receiver will exit programming mode, issuing two acoustic signals of 1 sec.

N.B.: Each transmitter can be configured independently on the receiver.

GROUPS (available on 30-code receivers only)

Receivers can be configured with a group (from 0 to 7) so that there is no interference when working near each other.

GROUP CONFIGURATION

The configuration can be carried out with the programming tool or by self-programming as follows.

Self-programming

After the receiver has been totally reset, it will be configured with the group of the first radio-programmed transmitter by enabling the hands free mode.

Exception: If the receiver has been configured using programming tools, the group may only be changed with the programming tool.

Operations

On powering the receiver, the led R1 will flash the same number of times as the group number with which it is configured.

USE OF THE RECEIVER

These receivers are designed for use as remote controls for garage doors. Their use is not guaranteed for directly activating any other equipment different to that specified. The manufacturer reserves the right to modify equipment specifications without prior notice.

WARNINGS

Disconnect the power supply before handing the receiver.

The instructions for using this equipment must remain in the possession of the user.

CE DECLARATION OF CONFORMITY

Hereby, **JCM TECHNOLOGIES, S.A**., declares that this STICK30, STICK500, DLX500 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

See website www.jcm-tech.com

Más información en <u>www.motion-line.com</u>
For further information see <u>www.motion-line.com</u>

